

Operating Instructions for Summit Chairs Industrial Models IND1, IND2, IND5 & IND6 Operator Chairs.

All adjustments should be made whilst you are seated.

1. The overall height of the chair can be adjusted by lifting the lever located below the middle of the seat on the right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the required height. To lower the chair simply lift this lever, put your weight back onto the seat and release the lever at the required height.
2. The back angle of the chair can be adjusted independently of the seat by lifting the lever located below the back of the seat on the right-hand side. The back can be locked at the required angle by pushing this lever down.
3. The back height can be adjusted by loosening the hand wheel located behind the seat below the stem of the back. Simply undo the hand wheel, lift or drop the back to the required position and tighten the hand wheel to lock the back.