

# Operating Instructions for Summit Rialto RL21 Chairs.

All adjustments should be made whilst seated.

1. The overall height of the chair is adjusted by lifting the lever located below the front of the seat on the right hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower simply lift the lever.
2. The recline of the seat and back is unlocked by lifting the lever located below the front of the seat on the left-hand side. Please be aware that there is a safety feature that requires you to lean gently into the back before it will release. The back can be locked in any of five positions by pushing the lever down or left unlocked to follow user's movements. The tension of the recline is adjusted by turning the knob located under the front of the seat.
3. The back height is adjusted by lifting the back up a step at a time for correct positioning of the lumbar support. When the back reaches the top of its travel it will then drop back to the start position.
4. The inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.
5. The height adjustable arms have a lever located underneath the outside edge of the arm pad. Lift this up, set the arm at the desired position and release the lever to lock.