

## **Operating Instructions For Summit SC Operator Plus SCT41, SCT51, SCT516 & SCT516/22 Chairs.**

All adjustments should be made whilst seated.

1. The overall height of the chair is adjusted by lifting the lever located below the middle of the seat on the right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower, simply lift the lever, put your weight back onto the seat and release the lever at the desired height.
2. The angle of the back is adjusted by lifting the lever located below the back of the seat on the right-hand side. The back is locked at the required angle by pushing the lever down.
3. The angle of the seat is adjusted by lifting the lever located below the middle of the seat on the left-hand side. The seat is locked at the required angle by pushing the lever down.
4. The height of the back is adjusted by loosening the handwheel located behind the seat, below the stem of the back. Simply lift the back to the required position and tighten the hand wheel.
5. The height adjustable arms have a lever located underneath the outside edge of each arm pad. Lift each lever in turn, set each arm at the desired position and release the lever to lock.
6. The optional inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.