

Operating Instructions for Summit Chairs Tiverton Models T442, T552 & T992 Operator Chairs.

All adjustments should be made whilst you are seated.

1. The overall height of your chair can be adjusted by lifting the lever located below the middle of the seat on the right-hand side. Lift your weight off the chair allowing the seat to rise and release the lever at the required height. To lower the chair simply lift this lever, put your weight back onto the seat and release the lever at the required height.
2. The synchronised seat and back angle can be adjusted by lifting the lever located below the back of the seat on the right-hand side. The seat and back can be locked at the required angle by pushing the lever down or they can be left unlocked to follow your movements. The tension of the recline can be adjusted by turning the knob located under the front of the seat.
3. The back height can be adjusted by directly lifting the back up a step at a time until the correct positioning of the lumbar support is achieved. When the back reaches the top of its travel it will then drop back to the start position.
4. The height adjustable arms have levers located underneath the outside edge of each arm pad. To adjust the arm heights, lift each lever in turn, set each arm at the required position and release the lever to lock the arms in place.
5. The inflatable lumbar support can be adjusted by using the hand bulb that hangs under the left-hand side of the seat. Squeeze the bulb to inflate the support and press the button on the bulb to deflate it.
6. If the chair is fitted with a seat slider, the seat depth can be adjusted by lifting the lever located below the middle of the seat on the left-hand side. Slide the seat forwards and backwards until the required position is achieved and release the lever to lock the seat in place.