

Operating Instructions for Summit Impact IM22 Task Chairs.

All adjustments should be made whilst you are seated.

1. The overall height of your chair can be adjusted by lifting the lever located below the middle of the seat on the right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower the chair simply lift the lever, put your weight onto the seat and release the lever at the required height.
2. The synchronised seat and back angle of the chair can be adjusted by pushing down on the lever located below the seat on the left-hand side. Please be aware that there is a safety feature that requires you to lean gently into the back of the chair before it will release. The seat and back can be locked at the required angle by lifting the lever or they can be left unlocked to follow your movements. The tension of the recline can be adjusted by turning the knob located under the front of the seat on the right-hand side.
3. The back height can be adjusted by directly lifting the chair back up a step at a time until the correct positioning of the lumbar support is achieved. When the back reaches the top of its travel it will then drop back to the start position.
4. The inflatable lumbar support can be adjusted using the hand bulb that hangs under the left-hand side of the seat. Squeeze the bulb to inflate the support and press the button on the bulb to deflate it.
5. The height adjustable arms operate by lifting the arm pad up a step at a time until the required height is achieved. When the arm pad reaches the top of its travel it will then drop back to its start position. The arm pads can be twisted to point 30 deg. in or out. The distance between the arms can be adjusted by unlocking the hand wheels under the seat and moving them as required.
6. The Multifunction adjustable arms adjust for height by pressing in the button on the arm post and lifting the arm to the desired height. The pads can be twisted to point 30 degrees inwards or outwards from their central position and can be slid forwards for extra reach. The distance between the arms can also be adjusted by unlocking the hand wheels under each side of the seat, moving the arms in or out as required and retightening the hand wheels.
7. The seat depth can be adjusted by pushing in the button located below the front of the seat on the right-hand side. Slide the seat forwards or backwards and release the button to lock the seat in the desired position.