

Operating Instructions for Summit Optech OP12 Task Chairs.

All adjustments should be made whilst seated.

1. The overall height of the chair is adjusted by lifting the lever located below the front of the seat on the right hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower simply lift the lever.
2. The synchronised seat and back angle is adjusted by lifting the lever located below the front of the seat on the left-hand side. Please be aware that there is a safety feature that requires you to lean gently into the back before it will release. The seat and back can be locked at the required angle by pushing the lever down or left unlocked to follow the user's movements. The tension of the recline is adjusted by turning the handle located under the front of the seat on the right hand side.
3. The inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.
4. The back height is adjusted by lifting the back up a step at a time for correct positioning of the lumbar support. When the back reaches the top of its travel it will then drop back to the start position.
5. The height adjustable arms have a lever located underneath the outside edge of the arm pad. Lift this up, set the arm at the desired position and release the lever to lock. The pads can be lifted and twisted to point 30 deg. in or out.
6. The seat depth is adjusted by lifting the lever located below the middle of the seat on the left-hand side. Slide the seat forwards and release the lever to lock in desired position.