

Operating Instructions for Summit Inflexion IF82 & IF92 Executive Task Chairs

All adjustments should be made whilst seated.

1. The overall height of the chair is adjusted by lifting the front lever, located below the seat on the right hand side. Lift your weight off the chair, allowing it to rise and release the lever at the desired chair height. To lower the chair, simply lift the lever.
2. The synchronised seat and back angle can be adjusted by lifting the lever located below the back of the seat on the right-hand side. The seat and back can be locked at the required angle by pushing the lever down, or they can be left unlocked to follow your movements. The tension of the recline can be adjusted by turning the knob located under the front of the seat.
3. The back height can be adjusted by lifting the back up a step at a time, for correct positioning of the lumbar support. When the back reaches the top of its travel it will then drop back to the start position.
4. The height adjustable arms have a lever located underneath the front edge of the arm pad. Lift this up, set the arm at the desired position and release the lever to lock.
5. The inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate the support and press the button on the bulb to deflate it.
6. If the chair is fitted with a seat slider the seat depth is adjusted by lifting the lever located below the middle of the seat on the left-hand side. Slide the seat forwards and release the lever to lock it in the desired position.